


INSTALLATION INSTRUCTIONS FOR CP-4 AUTOMATIC GATE OPENER*

(WORKS WITH ALL GATE OPERATORS)

- For technical support, call 717-532-0033.
- In the unlikely event of product issues, call us at job site to troubleshoot *before* removing.
- Download full manual at www.cartell.com.
- Download the *Cartell Pro* technical app for Apple and Android (scan QR code below).

SENSITIVITY ADJUSTMENT




- Place unit beside driveway
- Test sensitivity before burial
- Adjust as needed, per below (dip switch color may vary)
- Sensitivity is high by default

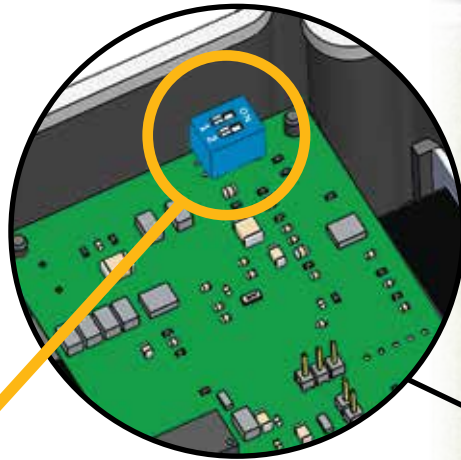

SENSITIVITY ADJUSTMENT

HIGH (Default) Detects vehicle going 5 MPH 12-14' away	
MEDIUM Detects vehicle going 5 MPH 6-8' away	
LOW Detects vehicle going 5 MPH 2-3' away	

SCAN FOR APP

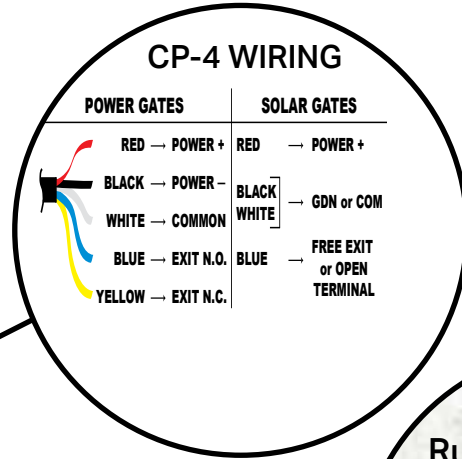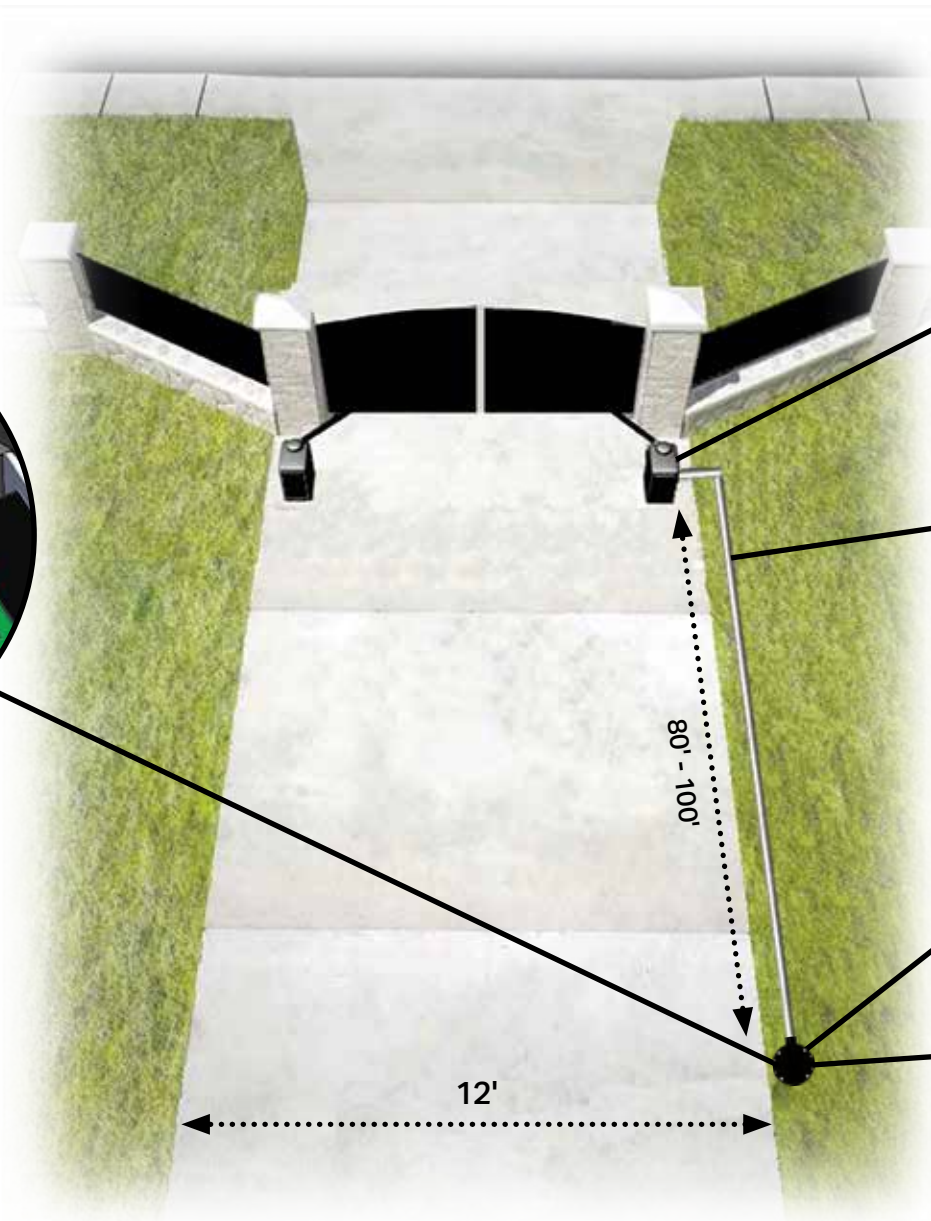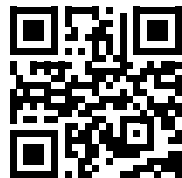


VOLTAGE:

8-24 VAC
8-30 VDC


CURRENT DRAW:

Standby: 30-70 μ A
Alarm: 40-60 mA

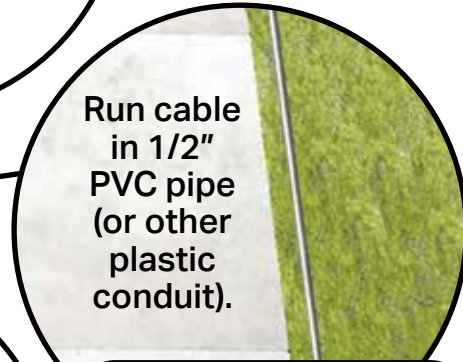


Run cable in 1/2" PVC pipe (or other plastic conduit).

NOTE: Warranty is voided if cable is not run in conduit.

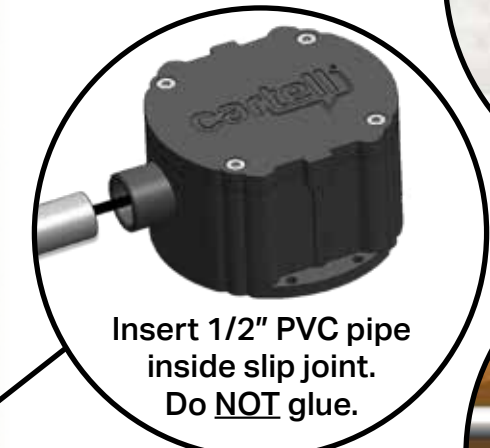

Insert 1/2" PVC pipe inside slip joint. Do NOT glue.

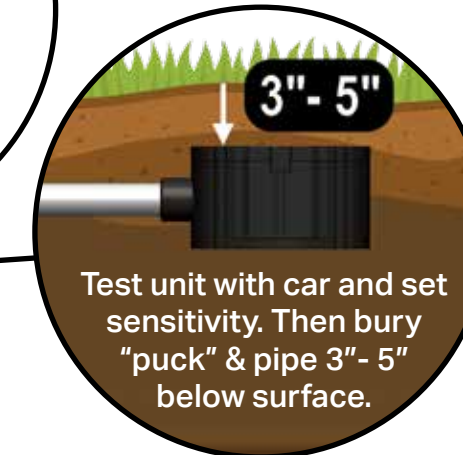

Test unit with car and set sensitivity. Then bury "puck" & pipe 3" - 5" below surface.

Gate image from www.gateinfo.org. Used with permission.

*Patent Pending (App# US 16/502,422)